


Adorn Pillar Stone Installation

Natural Concrete Products – www.naturalconcreteproducts.com

Tools needed to install


Safety glasses, gloves, measuring tape, caulking gun, level, exterior construction screws and construction adhesive. Safety first is the number one priority with any construction project. Always wear safety glasses and gloves when handling Adorn Pillar Stone.

Construct the pillar base using 2" X 2"s and OSB or plywood to the desired height. Each Pillar Stone is 6" high so designing the height in 6" increments will eliminate cutting of the Pillar Stones. The outside dimensions need to be 14" X 14". Cover the frame with an ice and water resistant type of wrap. It is recommended to use treated lumber (2"X4") on the base. Anchor the pillar as needed.

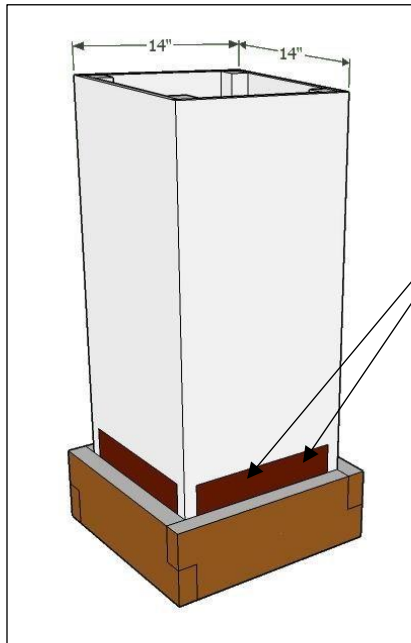

Attach the base course:

Place 4 Pillar Stones around the base as shown. Level the base course and attach with 2 screws per Pillar Stone through the attaching flange approximately 1" above the stone veneer. Continue installing the Pillar Stones one course at a time. Square up the corners, check for level and attach with screws.

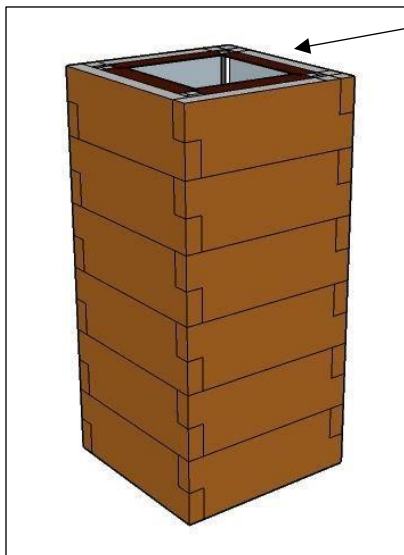

When you get to the top course, bend the flashing over the frame and screw in place.

Place a bead of construction adhesive around the top of the Pillar Stones. Set the Pillar Cap in place.

The finished pillar will be approximately 18" square.

