

Adorn Post Stone Installation


Natural Concrete Products – www.naturalconcreteproducts.com

Adorn Post Stone is designed to fit on a 6" X 6" post.

When using treated wood, a layer of a peel & stick rubberized asphalt membrane must be used, like ProtectoWrap Deck Joist tape, or equivalent. The fastener used must be rated to be used on treated wood, GRK R4, U2 Universal, or equivalent.

Tools needed to install

Safety glasses, gloves, measuring tape, caulking gun, level, proper screws and construction adhesive. Safety first is the number one priority with any construction project. Always wear safety glasses and gloves when handling Adorn Post Stone.

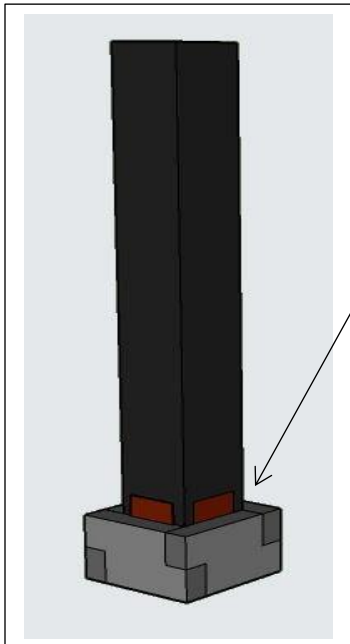

Attach the base course:

Place 4 Post Stones around the base of the 6" X 6" post as shown. Level the base course and attach with 2 screws per Post Stone through the attaching flange approximately 1" above the stone veneer. Continue installing the Post Stones one course at a time. Square up the corners, check for level and attach with screws.

