


# 4' Adorn Pillar Stone Mailbox Enclosure Installation

Natural Concrete Products – [www.naturalconcreteproducts.com](http://www.naturalconcreteproducts.com)

## Tools needed to install


Safety glasses, gloves, measuring tape, caulking gun, level, fasteners, construction adhesive, and a circular or chop saw with a diamond blade. Safety first is the number one priority with any construction project. Always wear safety glasses and gloves when handling Adorn Pillar Stone.

Construct the mailbox enclosure using 2" X 2"s and OSB or plywood 4' high. The outside dimensions need to be 14" X 14". At approximately 3' high install a shelf for the mailbox to sit on. Cut the appropriate sized opening on one side to accommodate the mailbox. Cover the frame with an ice and water resistant type of wrap. It is recommended to use treated lumber (2" X 4") on the base. Anchor the mailbox enclosure as needed.

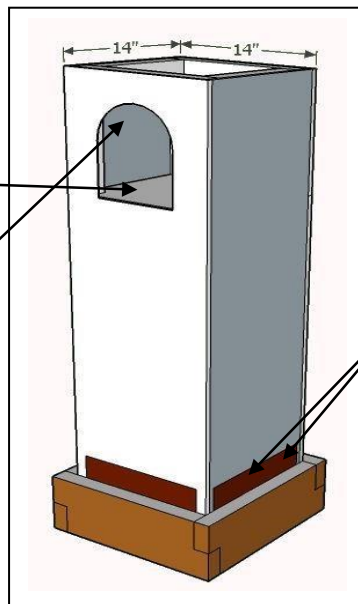

Attach the base course:

Place 4 Pillar Stones around the base as shown. Level the base course and attached with 2 screws per Pillar Stone through the flashing approximately 1" above the stone veneer. Continue installing the Pillar Stone one course at a time. Square up the corners, check for level and attach with screws.

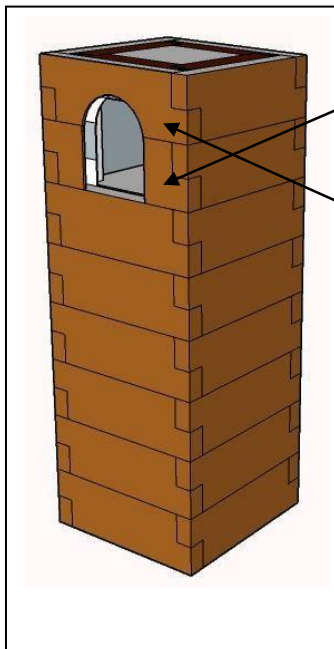

Cut 1 Pillar Stone to the desired lengths, screw and glue in place with construction adhesive.

Set the top Pillar Stone in place, trace the arc on the back of the stone and cut to fit the opening.

When you get to the top course, bend the flashing over the frame and screw in place.

Place a bead of construction adhesive around the top of the Pillar Stones. Set the Pillar Cap in place.

Install mailbox

